



**425-6480**  
**'15+ Silverado**

**Does NOT Work**  
**With Floor Mounted**  
**4x4 Shifter**


## Installation Instructions



Remove (2) T15 screws from under side of mini-compartment of OEM dash.




Pull mini-compartment away from OEM dash releasing clips.

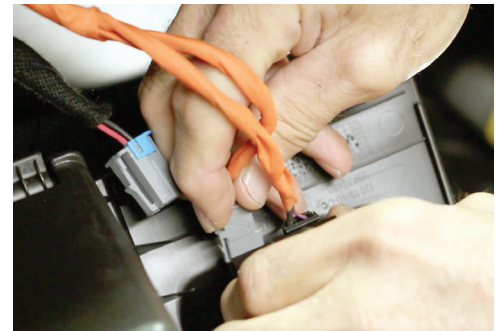

Uplug wire harness from mini-compartment.



Remove OEM 12V outlet from mini-compartment and relocate into Jotto Desk console.

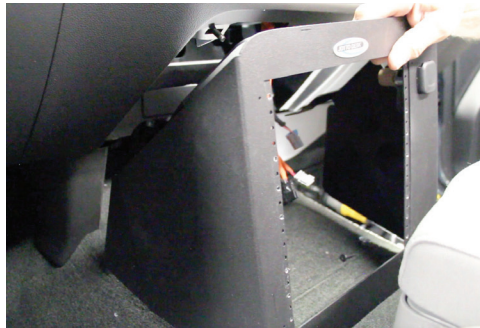

Position Jotto Desk Contour Console into place.



Insert bolt spacer/stud into slots into where clips on OEM mini-compartment.



Tighten provided (2) 7mm and (2) 1/4-20 bolts inside the Jotto Desk console.

**If you have questions or need further assistance please call Technical Support: 1.877.455.6886**