



# 2006+ CHEVY IMPALA - Contour Console INSTALLATION INSTRUCTIONS

Model No. 425-6137 - 12" Console (bucket seat only)



Loosen back seat bolts on both passenger and driver side with a 15mm deep socket and ratchet.



Remove plastic cover from inside front seat rails  
*NOTE: Clip the thin portion at the back of the plastic cover with wire cutters to aid in removal.*



Using a Rubber Mallet, install mini-floorplate as shown.  
*NOTE: Make sure the floorplate is installed as tightly to the seat rails as possible.*

To stabilize floorplate, screw levelers (see illustration) located on both feet, down with flathead screwdriver firmly

*NOTE: Do not over tighten.*



Gently pry lighter housing away from the dash. Use a flathead screwdriver to separate the lighter units from the housing.



Slide console in place, flush against the bottom of dash. Install the console to the mini-FLP using the provided washers and bolts.

# 2006+ CHEVY IMPALA *Optional Accessory Floorplate*

**Model No. 425-2814** (Accessory FLP only)

**Model No. 425-2883** (Accessory FLP w/ Mini-FLP)



Remove cup holder and set factory screws aside for later use.




Position the accessory FLP as shown and using provided washers and bolts, attach to the mini-FLP. *Do not tighten.* Replace the four factory screws from the discarded cupholder, with the remaining washers provided. Securely tighten bolts at front.



Follow the instructions below if you've ordered the **Armrest Lock Box with Riser Plate, Model No. 425-6088**

Place the Riser Plate on the upper portion of the Accessory FLP, so that the top of the riser is level. *(Use the four factory screws from the existing cup holder along with the provided washers to install the Riser Plate.)*

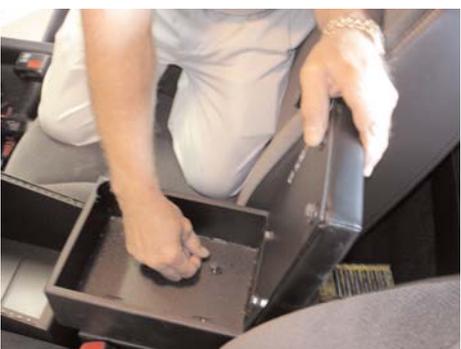

Use the provided washers and bolts to install the Lock Box to the Riser Plate.

  
**PUBLIC SAFETY SOURCE**  
WWW.PUBLICSAFETYSOURCE.COM  
**1-866-587-4661**

  
**DIVERSIFIED**  
PRODUCTS.NET